

## P25 Compact Series - ANTI-VANDAL KIT

### ANTI-VANDAL KIT ASSEMBLY

Figure.1 shows an exploded view of the parts supplied with the P25 anti-vandal kit and highlights the order in which they are mounted in the user panel.

The P25 anti-vandal kit is designed for use in conjunction with 2 off M3 x 12mm mounting studs fitted to the underside of the user panel.

### ASSEMBLY PROCEDURE:

**Stage 1:** Locate Trackball device into the cut out of the mounting panel and secure into panel using the 2 off hexagonal spacers provided. Do not over tighten the hexagonal spacers when securing the device into the panel.

**Stage 2:** Locate the back plate over the two threaded studs of the hexagonal spacers.

**Stage 3:** Place a locking washer over each stud.

**Stage 4:** Secure the back plate to the Trackerball device using the 2 x M3 nuts provided. Do not over tighten the M3 nuts.

Figure.2 details the completed anti vandal kit.

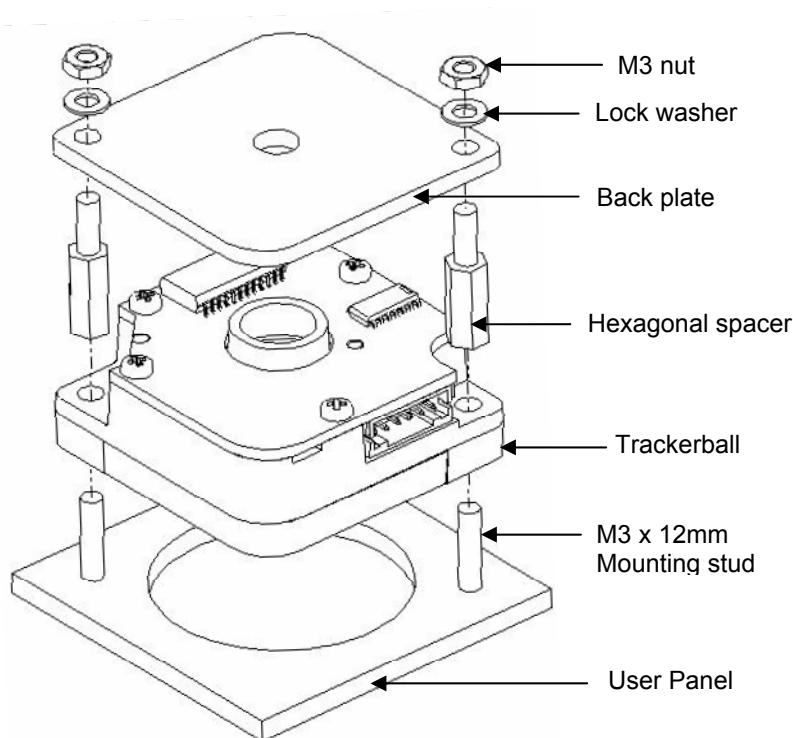


Figure.1 Anti-vandal kit assembly procedure

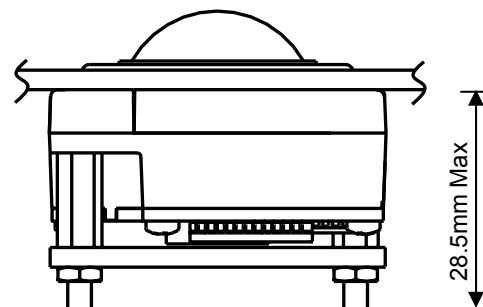


Figure.2 Completed assembly